

INSTALLATION INSTRUCTIONS FOR VLFIG-HRC VISION LITE KITS

Installation Instructions for Models VLFIG-HRC




1. Read and follow the installation requirements of the door manufacturers.

2. Cut the hole in the door to correspond to the order size of the vision frame. Assure that the opening is plumb and square.

3. Prepare the cutout if required, per the door manufacturers installation instructions.

4. Apply Glazing Tape to the perimeter of the inside (back) of both sides of the vision frame to reduce potential moisture infiltration - see illustration.

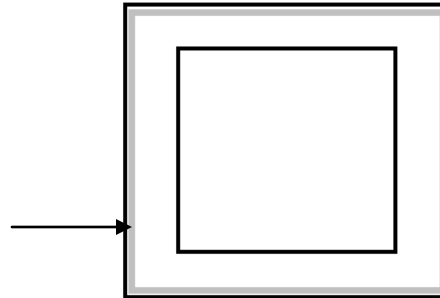


5. Install EPDM Tape and Silicone Glazing Sealant to both sides of glazing - see illustration.

6. Insert the corridor (exterior) side of the vision frame in the cutout.

7. Insert glazing into frame, seating firmly, using setting blocks as needed.

8. Place O-ring on 2 of the screws provided, and insert into the countersunk holes, carefully align the room side of the frame to the holes in the corridor side of the frame. Screw in enough to hold frame in place for alignment, then insert the other screws lightly (with O-rings). Tighten the screws alternately in a criss-cross pattern to avoid putting more pressure on one side than the other. Do not tighten to the point of deflecting the frame.

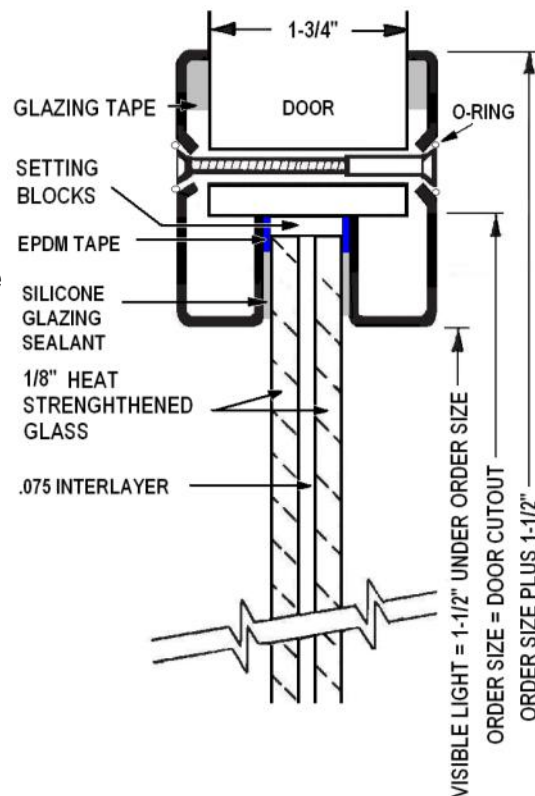

 <p>A DIVISION OF ACTIVAR INC. Construction Products Group <small>www.activarcp.com</small></p>	<h3>INSTALLATION INSTRUCTIONS FOR VLFIG-HRC VISION LITE</h3> <p>Install only glass with the same rating as the vision frame & door in hurricane-rated door assemblies.</p>
<p>ACPG WEST COAST & AIR LOUVERS MANUFACTURING: COMMERCE, CA HEADQUARTERS & CUSTOMER SERVICE: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-766-0660 FAX: 952-835-2218 EMAIL: SALES@AIRLOUVERS.COM WWW.ACTIVARCPG.COM • ACPG WAREHOUSES: LANCASTER PA, ATLANTA GA, CHICAGO IL, BLOOMINGTON MN 5-13-10</p>	